


AromaSteam™

CONTENTS:

- Pump and integral bracket
- 6 feet of pressure hose
- 2 feet of suction hose
- Filter
- Atomizing Nozzle
- Demand Button
- Installation and Operation Manual

- Electronic oil delivery system evenly infuses scent into steam
- Complete with hoses, fittings and oil atomizer
- Can be controlled directly from an eTEMPO/Plus® keypad
- AromaSteam System oils available in one-liter bottles.
- The AromaSteam is rated 12 watts at 120 VAC
- The pump and integral bracket is 7" long x 6.5" wide x 4.5" high.
- cULus Listed

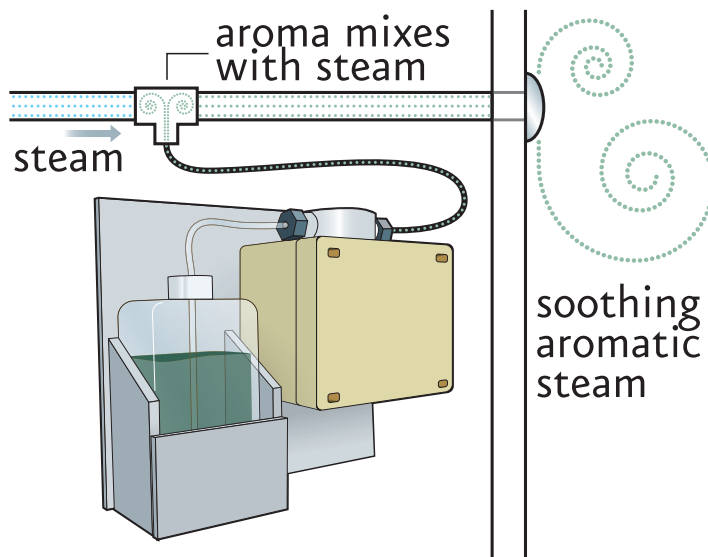

OPERATION

ETEMPO/PLUS

1. Press the AROMA button on the eTempo/Plus control (Aroma will appear in the display).
2. When the generator is steaming the pump will inject oil into the steam line at preset time intervals.
3. If the generator is not steaming, no oil will be pumped.

TEMPO, TEMPO/PLUS AND ETEMPO

1. With the generator on press the demand button once (the demand button will light up).
2. When the generator is steaming the pump will inject oil into the steam line at preset time intervals.
3. If the generator is not steaming, no oil will be pumped.

NOTE: After the generator has been turned off the light on the demand button will remain ON, the pump will be in stand-by mode waiting for the generator to be turned on again.

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See Mr.Steam® AromaSteam Installation, Operation and Maintenance Manual, PUR 100402, for details. Click here to download this manual:
<http://mrsteam.com/products/technical-downloads.html>